




2 TRACK | E0015

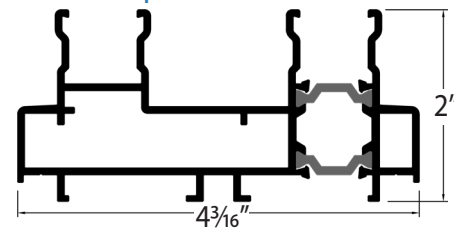


2 TRACK ADD ON | E0167

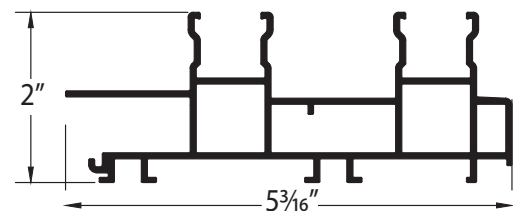


3 TRACK | E0016

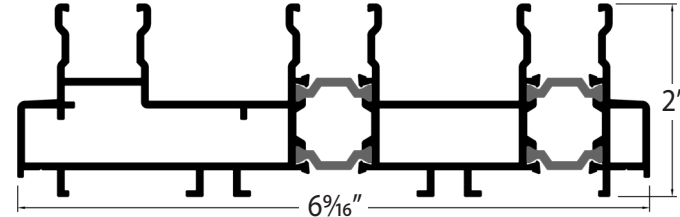


4 TRACK | E0018

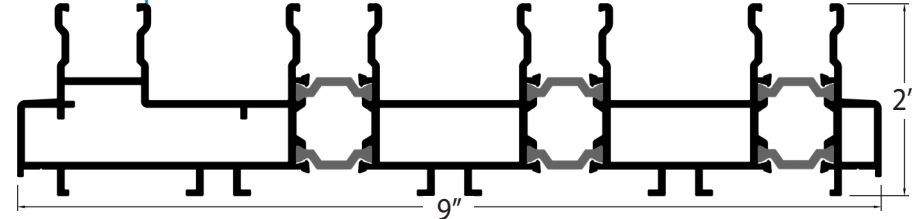


5 TRACK | E0019

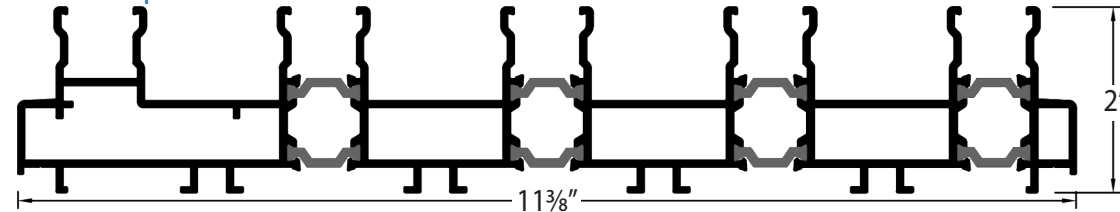


ADA SILL (INTERIOR ONLY)

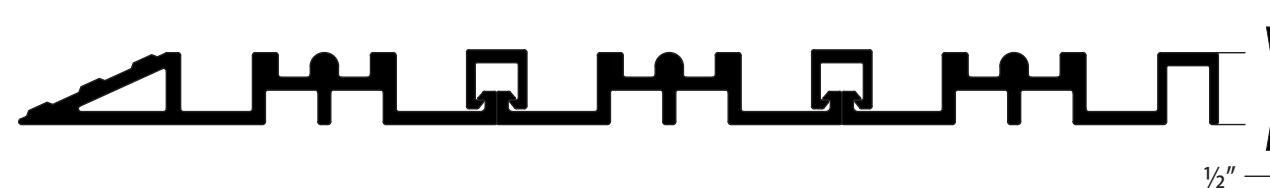


E0121

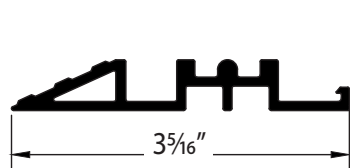



E0123

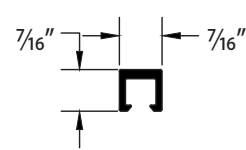


E0122




E0125

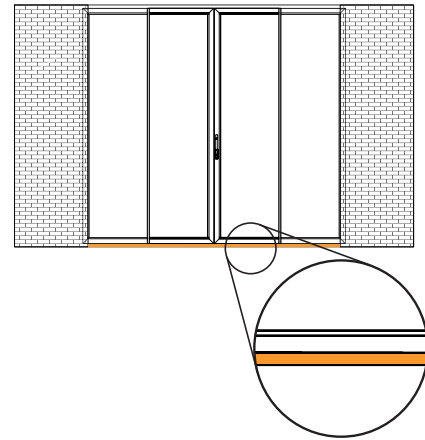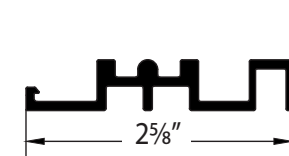




ASTRAGAL | E0094

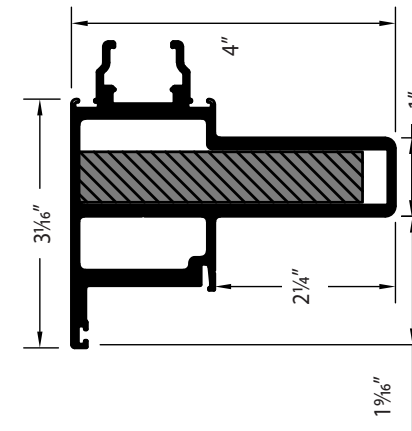


OUTSIDE CORNER
ASTRAGAL | E0014

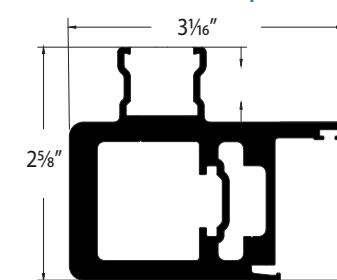


INSIDE CORNER
ASTRAGAL | E0124

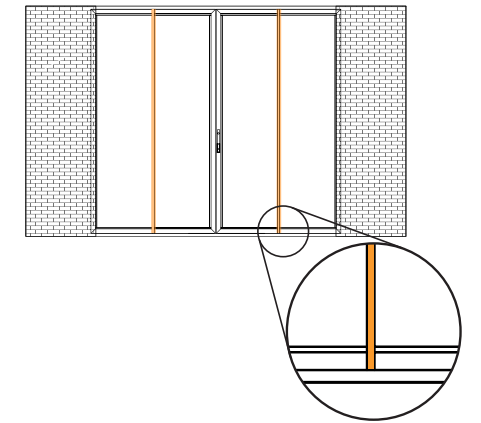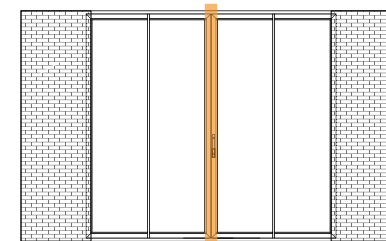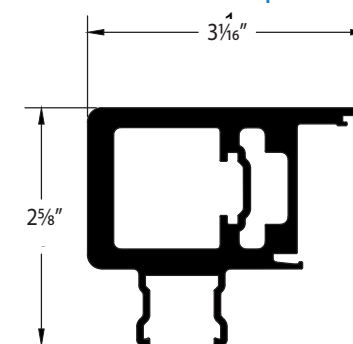




INTERLOCK | E0009

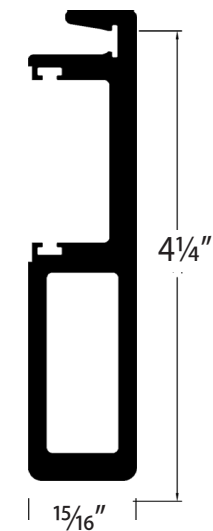


SLIM-LOCK INTERLOCK
(OPTIONAL, NON-IMPACT) | E0240

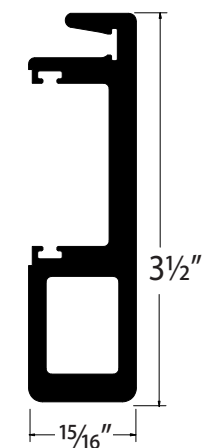


SASH | E0008
GLAZING BEAD | E0064

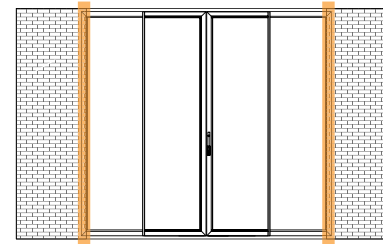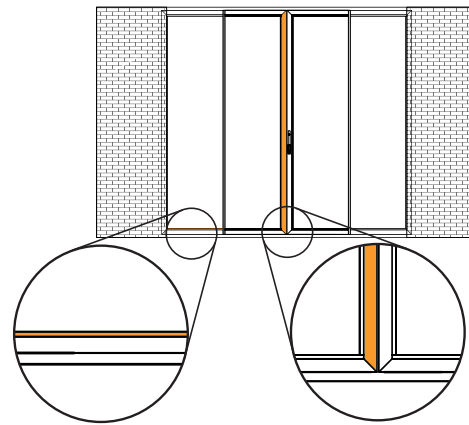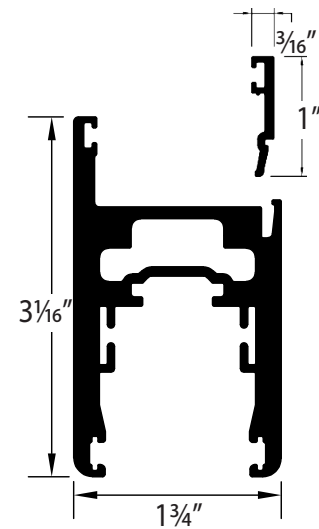

P HOOK | E0011

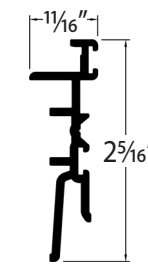


P HOOK MOUNT | E0096

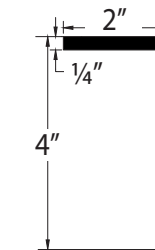


POCKET FOLLOWER

E2011
2 TRACK (EXT. POCKET) - $4\frac{13}{16}$ "
2 TRACK (INT. POCKET) - $6\frac{1}{16}$ "
3 TRACK - $9\frac{1}{16}$ "
4 TRACK - $11\frac{1}{2}$ "


E0238
5 TRACK - $13\frac{7}{8}$ "





9/16" BEAD COMBO | E0093

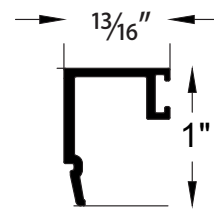



9/16" REDUCER BAR | E0065

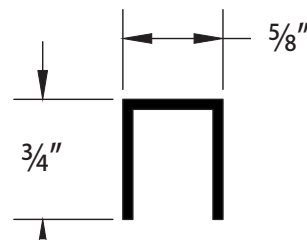


SASH END CAP | 30039

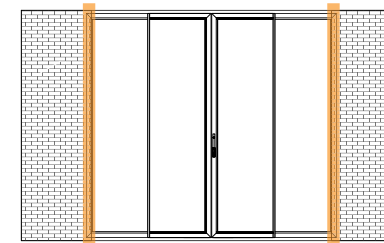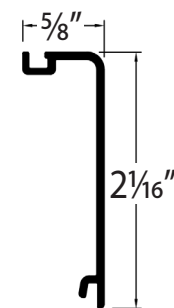



JAMB & HEADER TRIM | E0013

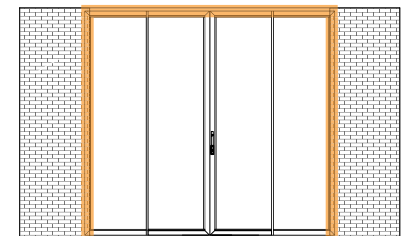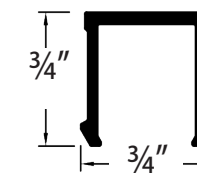

TRACK FILLER | E0109

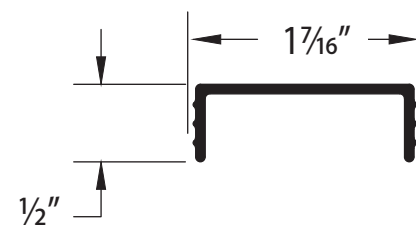

SNAP TRACK | E0012

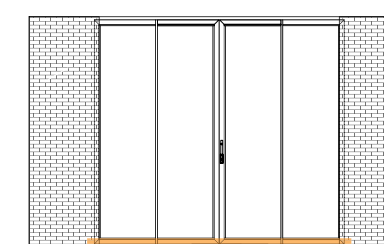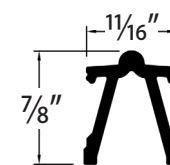

CONDENSATION DRAIN | E0040

